

INSTRUCTION MANUAL TO FOLD AND TO PUT INSIDE EACH BOX 10x15 CM

FR

R-MUSIC

BOOSTER-XL

ENCEINTE HIGH-POWER SANS FIL

1. MENU

2. PRÉCÉDENT / VOL-

3. PLAY / PAUSE

4. SUIVANT / VOL+

5. MODE

6. MIC PRI

7. VOLUME & ECHO MICRO

8. VOLUME ENCEINTE

9. PRISE MICROPHONE 1

10. PRISE MICROPHONE 2

11. PORT AUX

12. PORT CARTE SD

13. PRISE D'ALIMENTATION

14. PORT USB

15. ALLUMER / ÉTEINDRE

16. HIGH 1 (AIGU)

17. HIGH 2 (MEDIUM 1)

18. MEDIUM (MEDIUM 2)

19. BASS (GRAVE)

9

10

11

12

13

14

15

MIC1

MIC2

AUX

MICRO SD

DC IN

USB

POWER

7

8

MULTIVOL

BASS

MEDIUM

HIGH 2

HIGH 1

MASTERVOL

16

17

18

19

MENU

MIC PRI

MODE

<

HI

>

1

2

3

4

5

INSTRUCTIONS DE RECHARGEMENT :

Lorsque l'enceinte est en charge, le voyant de la batterie sur l'écran est rouge. Lorsque'elle est complètement chargée, il passe au vert. Si le niveau de la batterie est faible, le voyant clignotera. Veuillez alors recharger l'enceinte.

LUMIÈRE DE L'ENCEINTE :

Appuyez sur MIC PRI (6) pendant 3 secondes pour allumer ou éteindre la lumière de l'enceinte. Sinon appuyez sur le bouton LED de la télécommande pour allumer ou éteindre la lumière de l'enceinte.

MODE BLUETOOTH® :

1. Appuyez sur MODE (5) pour passer en mode Bluetooth®.

2. Activez le mode Bluetooth® sur votre smartphone, tablette ou ordinateur.

3. "R-Music BOOSTER-XL" apparaîtra sur votre écran après quelques secondes.

4. Sélectionnez-le pour confirmer l'appairage.

5. Appuyez longuement sur le bouton MODE (5) pendant 3 secondes pour déconnecter le Bluetooth®.

MODE USB, CARTE MICRO SD OU AUX :

1. Lorsqu'une carte micro SD, une clé USB ou câble jack est branchée à l'enceinte, celle-ci passe automatiquement en mode lecture de musique.

2. Appuyez sur PLAY / PAUSE (3) pour faire pause. Appuyez à nouveau pour relancer la lecture.

3. Appuyez sur PRÉCÉDENT (2) ou SUIVANT (4) pour changer de piste.

4. Appuyez sur MODE (5) pour passer en mode USB, MICRO SD, AUX, FM ou Bluetooth®.

MODE FM (RADIO):

1. Appuyez sur MODE (5) pour passer en mode radio.

2. Appuyez longuement sur PLAY / PAUSE (3) pour lancer la recherche automatiquement de stations. L'enceinte va alors chercher toutes les fréquences radios et les sauvegarder.

3. Une fois la recherche terminée, appuyez sur PRÉCÉDENT (2) ou SUIVANT (4) pour changer de station.

MICROPHONE :

INSTALLATION :

1. Insérez le microphone dans le port 9 ou 10.

2. Appuyez sur MIC PRI (6) pour l'activer ou le désactiver.

UTILISATION :

1. Chanter dans le microphone pour vous entendre.

2. Réglez le volume de avec le bouton MULTIVOL (7) pour obtenir le meilleur résultat. La LED s'allume pour indiquer la baisse du son de la musique et l'augmentation du son du microphone.

RÉGLAGE DU VOLUME ET DE L'ÉCHO :

• Tournez le bouton MULTIVOL (7) pour baisser ou augmenter le son du micro.

La lettre H--- s'affiche sur l'écran suivie d'un chiffre (0 à 15), indiquant le niveau sonore du micro.

• Appuyez 2 fois sur le bouton MENU (1) et tournez le bouton MULTIVOL (7) pour modifier l'écho du micro.

La lettre E--- s'affiche sur l'écran suivie d'un chiffre (0 à 15), indiquant le niveau d'écho du micro.

Pour ne plus avoir d'écho, mettez-le à 0.

• A chaque mise en marche de l'enceinte, le son et l'écho du micro sont à 15.

FONCTION REC (ENREGISTREMENT) :

Vous pouvez vous enregistrer lorsque vous connectez un microphone. Vous pouvez stocker vos enregistrements en insérant une clé USB ou une carte micro SD dans l'enceinte. Si une carte USB et une carte micro SD sont insérées, l'USB sera prioritaire.

• Appuyez sur le bouton REC de la télécommande pour vous enregistrer.

• Appuyez sur le bouton REC Play de la télécommande pour écouter votre enregistrement.

RÉGLAGE DU VOLUME, DES AIGÜS, MEDIUMS ET BASS :

• Augmentez et réduisez le volume en tournant le bouton MASTERVOL (8).

Si vous souhaitez avoir le son au max, veuillez monter le son sur votre smartphone, tablette et ordinateur en plus de l'enceinte.

• Augmentez et réduisez les aigus avec le curseur HIGH 1 (16).

• Augmentez et réduisez les médiums avec les curseurs HIGH 2 (18) et MEDIUM (17).

• Augmentez et réduisez les basses avec le curseur BASS (19).

CONNEXION DE 2 ENCEINTES ENSEMBLE :

1) En mode Bluetooth®, appuyez 2 fois sur le bouton PLAY / PAUSE (3) de chaque enceinte pour lancer l'appairage automatique.

2) Après quelques secondes, vous entendrez un son indiquant que les enceintes se sont correctement connectées entre elles.

3) Activez la fonction Bluetooth® sur votre smartphone, tablette ou ordinateur.

4) "R-Music BOOSTER-XL" apparaîtra sur votre écran. Sélectionnez-le et pour confirmer la connexion. Une enceinte deviendra alors le canal de droite et l'autre le canal de gauche. Appuyez longtemps sur le bouton MODE (5) pour arrêter la connexion des 2 enceintes.

EN

R-MUSIC

BOOSTER-XL

WIRELESS HIGH POWER SPEAKER

1. MENU

2. PREVIOUS / VOL-

3. PLAY / PAUSE

4. NEXT / VOL+

5. MODE

6. MIC PRI

7. MIC VOLUME & ECHO

8. SPEAKER VOLUME

9. MICROPHONE SLOT 1

10. MICROPHONE SLOT 2

11. AUX PORT

12. MICRO SD CARD SLOT

13. DC IN

14. USB PORT

15. POWER BUTTON

16. HIGH 1 (TREBLE)

17. HIGH 2 (MEDIUM 1)

18. MEDIUM (MEDIUM 2)

19. BASS (BASS)

9

10

11

12

13

14

15

MIC1

MIC2

AUX

MICRO SD

DC IN

USB

POWER

7

8

MULTIVOL

BASS

MEDIUM

HIGH 2

HIGH 1

MASTERVOL

16

17

18

19

MENU

MIC PRI

MODE

<

HI

>

1

2

3

4

5

CHARGING INSTRUCTIONS:

When the battery is charging, the battery symbol on the display is red. When it is fully charged, it will turn to green. When the battery is low, the battery icon on the LED screen will blink. Please recharge the speaker .

SPEAKER LIGHT:

Press MIC PRI (6) for 3 second to switch on or off the speaker light. You can also press the LED button on the remote to switch on or off the speaker light.

BLUETOOTH® MODE:

1. Press MODE (5) to switch to Bluetooth® mode.

2. Switch the Bluetooth® mode on your smartphone, tablet or computer.

3. "R-MUSIC BOOSTER-XL" will appear on your screen after a few seconds.

4. Select it to confirm pairing. After successful pairing, you can enjoy your music.

5. Long press "MODE" Button (5) for 3 second to disconnect the Bluetooth®.

USB, MICRO SD CARD OR AUX MODE:

1. When a micro SD card, USB key or jack cable is plugged in, the speaker automatically switches to music playback mode.

2. Press PLAY / PAUSE (3) to pause. Press again to play your track.

3. Press PREVIOUS (2) or NEXT(4) to change the track.

4. Press on MODE(5) to switch to USB, MICRO SD, AUX, FM or Bluetooth® mode.

FM (RADIO) MODE:

1. Press MODE (5) to switch to radio mode.

2. Long press PLAY / PAUSE (3) to activate the automatic search of the station. The speaker will search all radio frequencies and save them saved.

3. When the search is finished, press PREVIOUS (2) or NEXT(4) to switch radio stations.

MICROPHONE OPERATION:

INSTALLATION :

1. Insert the microphone into the slot (9 or 10).

2. Press MIC PRI (6) to activate or turn off the microphone.

USE :

1. Sing into the microphone to hear yourself.

2. Adjust the volume with the MULTIVOL knob (7) to achieve the best result. The LED will light up to decrease the background music and improve the microphone sound.

VOLUME & ECHO SETTINGS:

• When using microphone, turn the MULTIVOL (7) knob to adjust the volume. The letter H--- on the screen followed by a number (0 to 15) indicates the microphone's volume.

• Press 1 time on MENU (1) and turn the MULTIVOL (7) knob the LED to adjust the echo. The letter E--- on the screen followed by a number indicates the microphone's echo.

• Everytime, you turn on the speaker, the echo and volume are at 15.

RECORDING FUNCTION:

You can record the sound source when you connect a microphone. It is possible to store the recordings on a USB key or a micro SD card. If both a USB and micro SD card are inserted, then USB will be priority.

• Press the REC button on the remote to start recording.

• Press the REC play button to play your recording.

VOLUME, TREBLE, MEDIUM ET BASS SETTINGS:

• Change the volume of the speaker bur turning the MASTERVOL (8) knob. If you want maxim, turn up the vne, turn up the volume of the speaker and your phone, tablet or computer.

• Increase and reduce the treble with the HIGH 1 slider (16).

• Increase and reduce the mids with the HIGH 2 (18) and BASS slider (17).

• Increase and reduce bass with the 100HZ slider (19).

CONNECT 2 BOOSTER SPEAKER TOGETHER:

1) Under Bluetooth® Mode, Press twice of the PLAY / PAUSE (3) button of either speakers to launch auto-pairing.

2) You will here a sound after a few seconds, indicating the speakers are paired successfully.

3) Activate the Bluetooth® of your smartphone, tablet or computer.

4) After a few seconds "R-Music BOOSTER-XL" will appear on your screen.

5) Select it to confirm pairing. Once speaker will become the left channel, and other will become the right channel. Long press the MODE button (5) to switch off the Bluetooth®.

WARNING: SAFETY INSTRUCTIONS

These safety instructions must be kept for future reference: Before operating the appliance, read the safety and operating instructions carefully before using the product. Respect all the warnings found on the product and in the operating instructions. Do not place this product in direct sunlight or close to sources of heat, such as inside a closed car in the sun or close to an oven. Do not use this product close to water or in the rain and do not allow any liquid to enter the product. Water and moisture may cause the electronic components to short circuit, leading to malfunctions. Do not use this product close to strong electromagnetic sources, such as microwaves. Electromagnetic interference may cause the product to function incorrectly. Do not drop the product or subject it to shocks and vibrations. Heavy shocks may damage the internal components. If the product gives off strange odours or heat, or if you notice any other sign of malfunctioning, unplug the product from the power supply immediately and contact your retailer to have it checked or repaired. Use a soft, dry cloth to clean the product. Do not use liquid cleaning products or window cleaning products. If a foreign substance or water enters the product, switch the appliance off immediately and remove the power cable. Then remove the foreign substance or water, if possible. Never attempt to repair your appliance; opening or removing the product exposes you to various risks, particularly electric shock. Repairs must be carried out by a specialist. Send the product to your nearest service centre. Do not attempt to disassemble or modify the product. No internal parts of the product can be repaired by the user, and unauthorised modifications will render your warranty void. If the battery is flat or does not function correctly, please send the product to your nearest customer service centre to have the battery replaced. Do not attempt to replace the battery yourself.

WARNING: WARNING FOR THE LITHIUM-ION / LITHIUM-POLYMER BATTERY

WARNING: Replacing the battery incorrectly risks causing an explosion. Replace the battery only with the same or an equivalent type recommended by the manufacturer. Batteries must not be exposed to excessive heat such as sunlight, flames or other similar heat sources. Dispose of used batteries in accordance with the manufacturer's instructions. Warning! Failure to use an original battery risks causing a fire, explosion, leakage and other hazards.

ENVIRONMENT: PACKAGING

To facilitate the recycling of packaging, please respect the sorting rules established locally for this type of waste.

BATTERIES

Used batteries must be disposed of at designated collection points according to local regulations in force. This appliance contains batteries covered by European directive 2006/66/EC, and cannot be disposed of among household waste. Please find out about the provisions applicable in your region concerning the separate collection of batteries. Correct disposal will help to preserve the environment and health.

PRODUCT

The crossed-out wheelee bin on the product (including its accessories) means that it belongs to the family of waste electrical and electronic equipment. To encourage recycling and reuse of waste electrical and electronic waste (WEEE) but also to protect the environment, the European regulation requires you to respect the sorting rules established locally for this type of waste.

European directive 2012/19/EU on waste electrical and electronic equipment (WEEE) requires that used domestic appliances are not disposed of with the normal municipal waste. Used appliances must be collected separately in order to optimise the recovery and recycling rates on the materials contained therein and to reduce the impact on human health and the environment. The "crossed-out wheelee bin" symbol is displayed on all products to remind of the separate collection obligations. Consumers should contact the local authorities or their retailer for instructions on how to dispose of their device.

RED INFORMATION:

R-Music hereby declares that this R-MUSIC BOOSTER-XL appliance conforms with essential requirements and other dispositions relevant to EU directive 2014/53/EU. The declaration of conformity can be viewed, at the following address https://www.dropbox.com/sh/v16giaqy4qal1kh/AAOzRJ7NQ3_SWA2EPY4Ov5la?dl=0

WARRANTY:

• R-Music warrants R-Music products against evident defect in material and workmanship for a period of 2 years from the date of original purchase for use. This warranty does not cover electrical or mechanical damage resulting from misuse or abuse, lack of reasonable care, damage due to force majeure or natural forces, or inadequate repairs performed by unauthorized service centres.

• Guarantee service is available only in the country of original purchase.

• Batteries and wear of parts due to normal use are not covered by this warranty.

• Performance of repairs or replacements under this warranty is subject to submission of this warranty card, completed and signed by the dealer on the day of purchase, and the sales invoice. Shipment of the defective item for repair under this warranty will be at the customer's own risk and expense. This warranty is valid for the original purchaser as the final user only. Mobility Lab will, at R-Music option, repair or replace items returned for repair under this warranty.

• In some countries, product liability legislation may give you other rights beyond the scope of this warranty card. Where applicable, such rights shall replace the rights and conditions stated in this warranty card.

Maximum transmitted power (20mW + Max R.F. power = 4dBm

2020 R-MUSIC. Tous droits réservés. R-MUSIC et le logo R-MUSIC sont la propriété de Mobility. Toutes autres marques sont les propriétés de leurs propriétaires respectifs. Fabricant et importateur : Mobility • 5 avenue de Verdun • 94200 Ivry-sur-Seine • FRANCE

2020 R-MUSIC. All rights reserved. R-MUSIC and R-MUSIC logo are trademark of Mobility. Other company and product names may be trademarks of their respective owners. Manufacturer and Importer : Mobility • 5 avenue de Verdun • 94200 Ivry-sur-Seine • FRANCE



