
























MODES

MODE 1

MODE 2

MODE 3

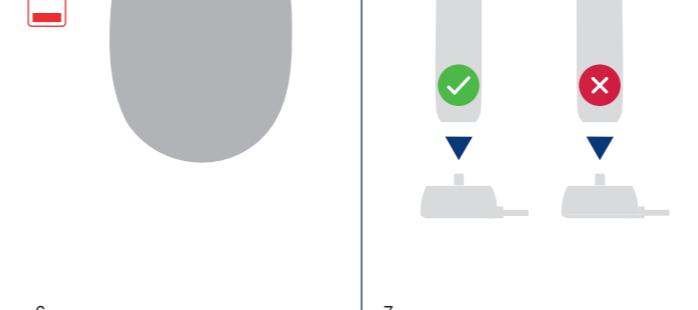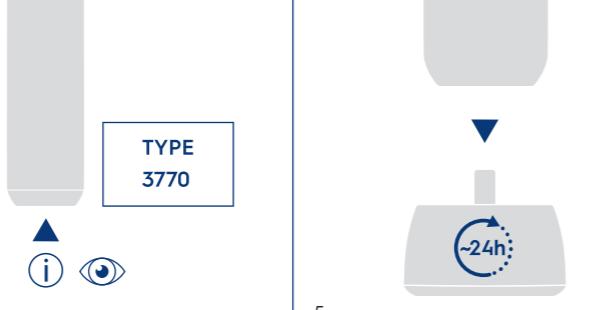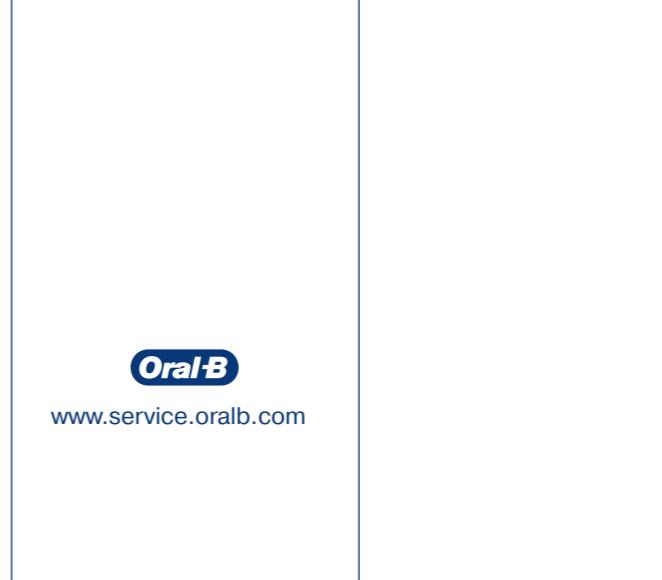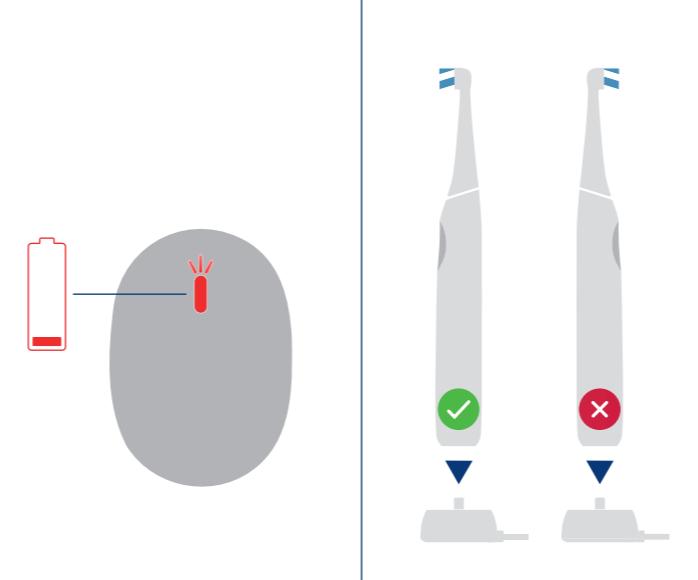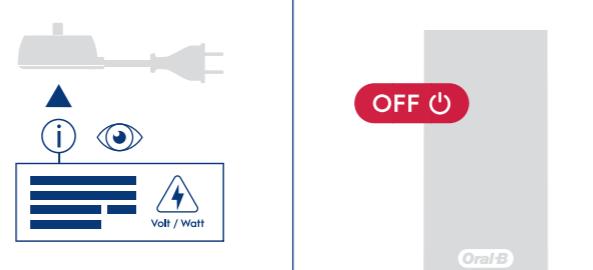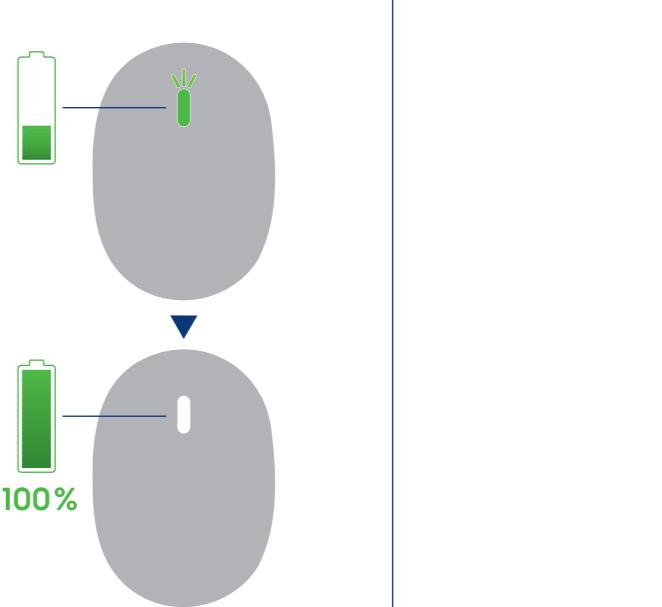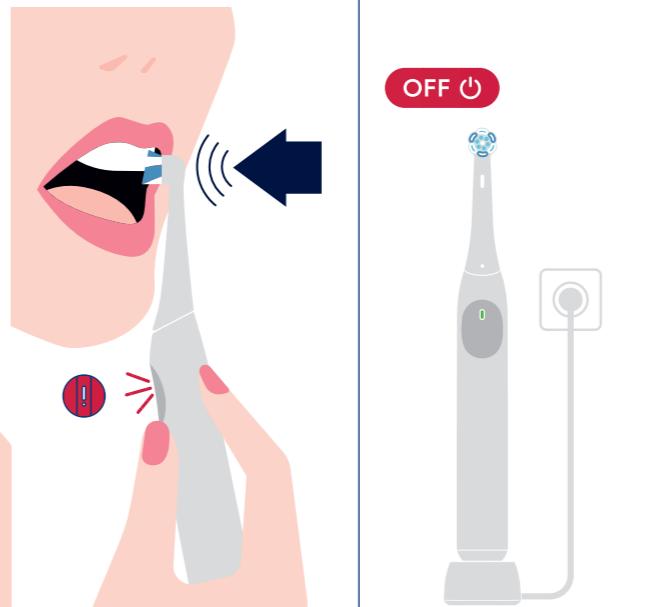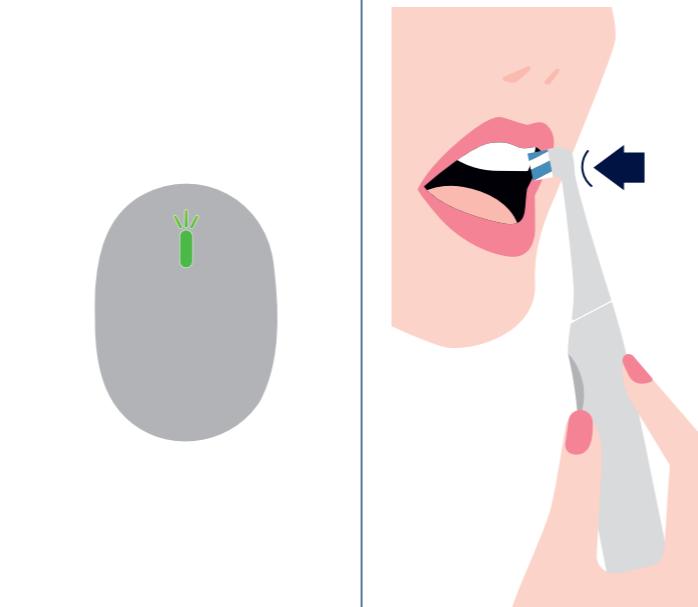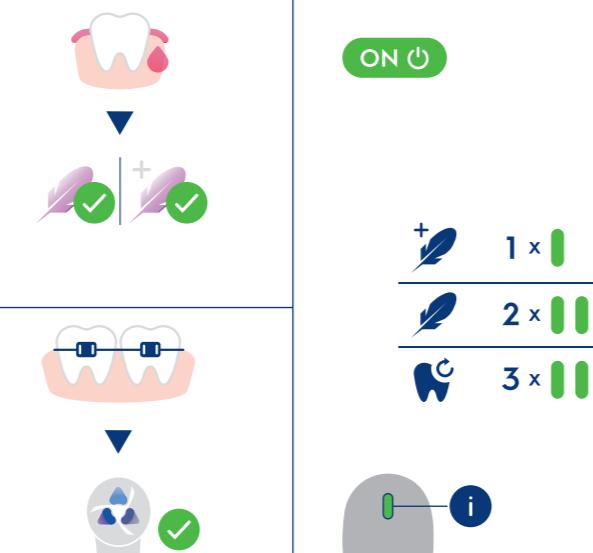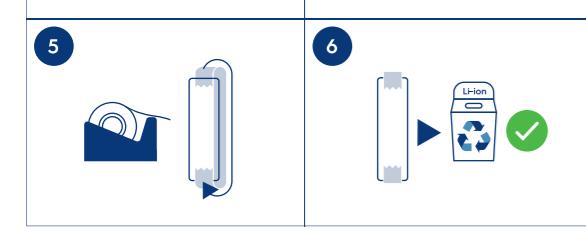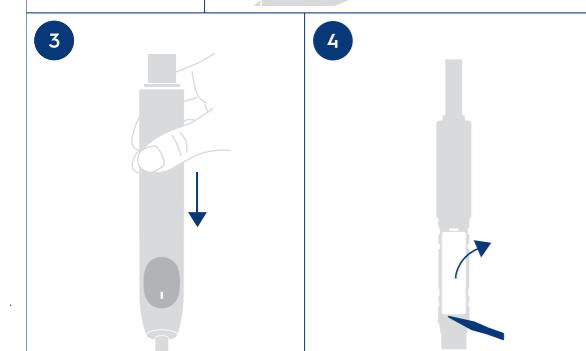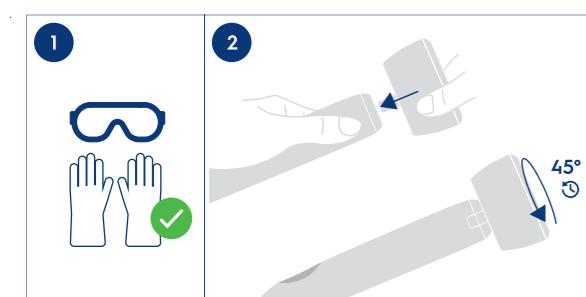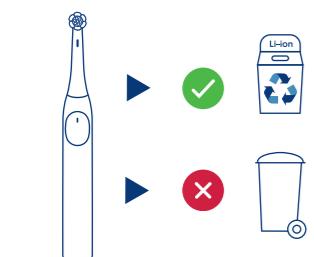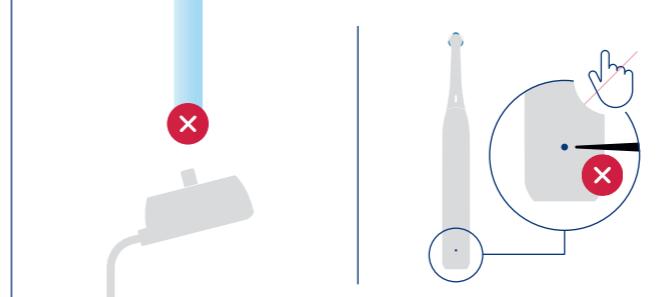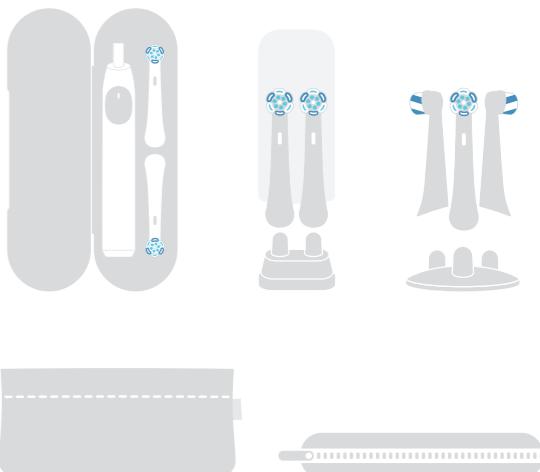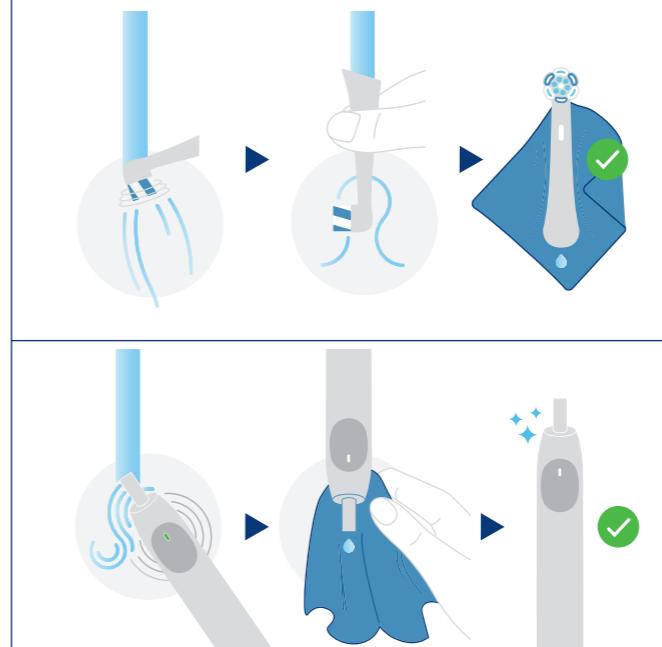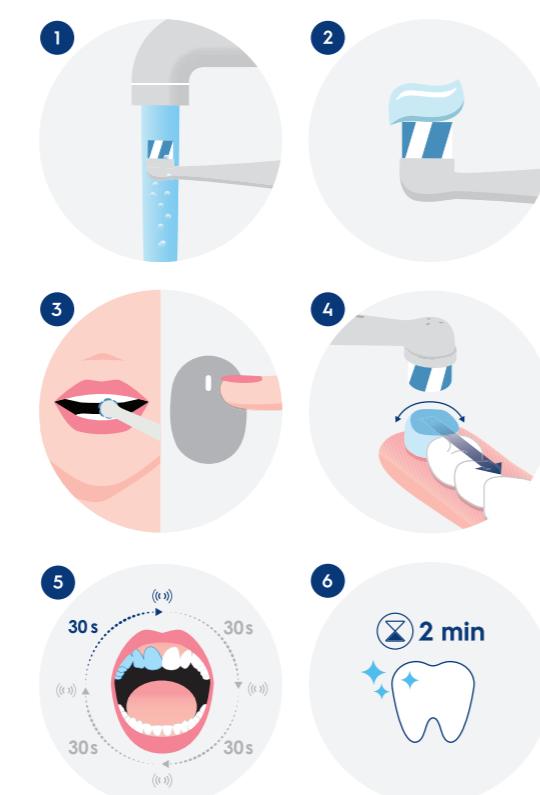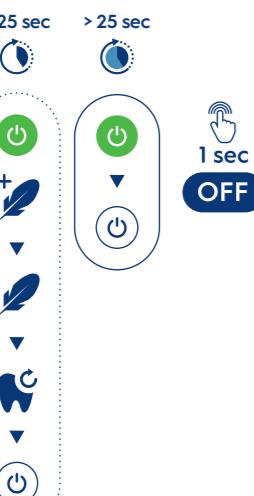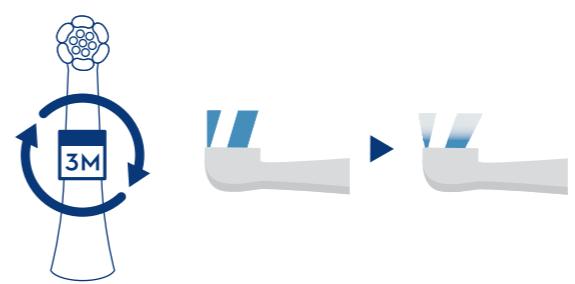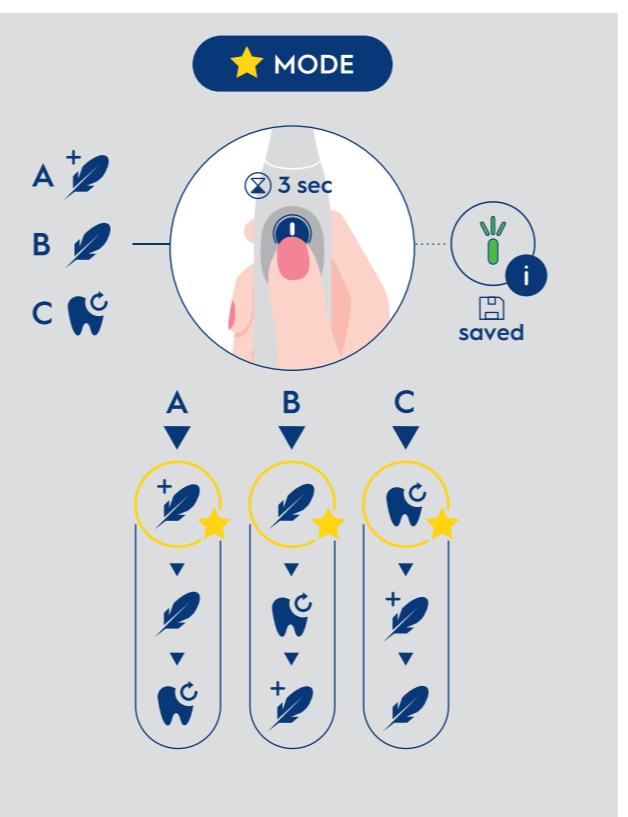

Oral-B
www.service.oralb.com

Welcome to Oral-B!
Before operating this toothbrush, please read these instructions and save this manual for future reference.
Note: Content may vary based on the model purchased.

IMPORTANT

- **Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

- If the product or cord is damaged, take it to an Oral-B Service Center.
- Never insert any object into any opening of the appliance.
- Only use charger provided with your appliance.

WARNING

- Do not place the charger, smart plug or charging travel case in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- This appliance contains batteries that are non-replaceable. The appliance has no user serviceable parts. Do not open and disassemble device except when disposing of the battery. Follow handling and disposal instructions of the battery/device described in this manual.
- Usage by children under age 3 is not recommended.
- Do not chew or bite on brush. Do not use as a toy or without adult supervision.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution.
- For hygiene reasons we recommend the use of individual brush handles and brush heads for each family member.
- Small parts may come off, keep out of reach of children.
- Clean brush head properly after each use (see «Cleaning guidelines» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.
- To avoid brush head breakage, which may generate a small part choking hazard or damage teeth:
 - Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush if brush head no longer fits properly. Never use without a brush head.
 - If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Replace brush (head) every 3 months or sooner if brush head becomes worn.
- When unplugging, always pull the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- For tooth brushing only.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- If stickers are provided, follow instructions on the sticker sheet. Ensure valve on back of the handle is not covered.
- Periodically check the entire product/cord/accessories for damage. A damaged or non-functioning unit should no longer be used.

- Do not modify or repair the product. This may cause fire, electric shock or injury.
- Never insert any object into any opening of the appliance.
- This toothbrush has a waterproof handle, is electrically safe and designed for use in the bathroom.
- Periodically check the operation of the Smart Pressure Sensor by pressing moderately on the brush head during use.
- This toothbrush and pouch (accessory) contain NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your Oral-B IO toothbrush.

Brush heads

Oral-B offers you a variety of different Oral-B IO brush heads that only fit your Oral-B IO toothbrush handle and can be used for tooth-by-tooth precision cleaning.

Cleaning guidelines

After each brushing, rinse your brush head under running water with the toothbrush switched on. Remove the brush head and clean the toothbrush handle and brush head separately. Make sure water runs inside the top of the handle while the handle is switched on, as well as inside the brush head. Wipe all parts dry and let them air-dry before reassembling your IO toothbrush again. Unplug the charger before cleaning. Clean the charger regularly with a damp cloth only. Please check individual cleaning instructions for each accessory in its «Accessories» paragraph.

Subject to change without notice.

Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your local region.



Warranty replacement brush heads
Oral-B warranty will be voided if electric rechargeable toothbrush handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

• Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.

• Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.

• Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high-quality standards.

Oral-B does not sell replacement brush heads or handle parts under any other brand name.

This guarantee in no way affects your rights under legal/statutory law.

FOR USA ONLY

Limited 2-Year Warranty

Oral-B warrants this appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase at retail. If the appliance exhibits such a defect, Oral-B will, at its option, repair or replace it without cost for parts and labor. The product must be carried in or shipped, prepaid and insured (recommended), to an authorized Oral-B Service Center. Proof of date of original purchase is required.

The cost to ship the product to an authorized Service Center is the responsibility of the consumer, the cost to return the product to the consumer is the responsibility of Oral-B. This warranty does not cover finishes or normal wear, nor does it cover damage resulting from accident, misuse, dirt, water, or Periodically check the entire product/cord/accessories for

tampering, unreasonable use, service performed or attempted by unauthorized service agencies, failure to provide reasonable and necessary maintenance, including recharging, or units that have been modified or used for commercial purposes.

ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE. IN NO EVENT WILL ORAL-B BE RESPONSIBLE FOR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other legal rights which vary from state to state.

How to obtain service in the USA

Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To obtain service:

A. Carry the product into the authorized Oral-B Service Center of your choice, or,

B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well. Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.

To obtain original Oral-B replacement parts and accessories:

Contact an authorized Oral-B Service Center.

Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.

To order original Oral-B replacement parts and accessories (including replacement brush heads) by phone: Please call 1-800-566-7252.

To speak to an Oral-B Consumer Service Representative: Please call 1-800-566-7252.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Unique Identifier

Oral-B IO

Responsible Party

The Procter & Gamble Co.
1 P&G Plaza
Cincinnati, OH 45202

Internet contact information

www.oralb.com

FCC Compliance Statement

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

IC Compliance Notice

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

AVERTISSEMENT

• Ne placez pas le chargeur, la prise intelligente ou l'outil de transport dans l'eau ou dans un liquide, et ne les rangez pas dans un endroit où ils pourraient tomber ou être tirés dans une baignoire ou un évier. Ne l'attrapez pas s'il tombe dans l'eau. Débranchez-le immédiatement.

• Cet appareil contient des piles qui ne peuvent pas être remplacées. Cet appareil ne contient aucune pile pouvant être réparée par l'utilisateur. Ne pas l'ouvrir ni le démonter, sauf pour en retirer la pile. Manipuler et jeter la pile/l'appareil conformément au mode d'emploi.

• L'utilisation des enfants de moins de 3 ans n'est pas recommandée.

• Ne pas mâcher ou mordre la brosse. Ne pas utiliser comme jouet ou sans la surveillance d'un adulte.

• Cette brosse à dents est un appareil de soins personnels et n'est pas destiné à être utilisé sur plusieurs patients dans un cabinet dentaire ou une institution.

• Pour des raisons d'hygiène, nous recommandons l'utilisation de manches de brosse et de têtes de brosse individuels pour chaque membre de la famille.

• De petites pièces peuvent se détacher, tenir hors de portée des enfants.

• Nettoyez correctement la tête de brosse après chaque utilisation (voir le paragraphe « Conseils de nettoyage »). Un nettoyage approprié garantit une utilisation sûre et une durée de vie fonctionnelle de la brosse à dents.

• Pour éviter de casser la brosse, qui peut générer un risque d'étouffement de petites pièces ou endommager les dents :

- Avant chaque utilisation, assurez-vous que la tête de brosse est bien ajustée. Cessez d'utiliser la brosse à dents si la tête de brosse ne s'ajuste plus correctement. Ne jamais utiliser sans tête de brosse.

- Si le manche de la brosse à dents est échappé, la tête de brosse doit être remplacée avant la prochaine utilisation, même si aucun dommage n'est visible.

- Remplacez la brosse (tête) tous les 3 mois ou plus tôt si la tête de brosse est usée.

• Connect the equipment into an

- outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FOR CANADA ONLY

Limited 2-Year Warranty

In the event this appliance fails to function within the specified warranty period because of defects in material or workmanship, and the consumer returns the unit to an authorized service center, Braun Canada will, at its option either repair or replace the unit without additional charge to the consumer. This warranty does not cover any product which has been damaged by dropping, tampering, servicing performed or attempted by unauthorized service agencies, misuse or abuse. This warranty excludes units which have been modified or used for commercial purposes.

IMPORTANT

• Les brosses à dents peuvent être utilisées par des enfants et des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, s'ils sont sous surveillance ou ont reçu les instructions d'utilisation appropriées et qu'ils comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Le nettoyage et l'entretien par l'utilisateur ne doivent pas être effectués par des enfants sans surveillance.

• Si le produit/câble est endommagé, apportez-le à un centre de service Oral-B.

• N'insérer aucun objet dans les ouvertures de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas tenter de modifier ou de réparer ce produit. Cela pourrait être cause d'incendie, de décharge électrique ou de blessure.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.

• Le manche est étanche, protégé contre les accidents électriques et conçu pour être utilisé dans la salle de bains.

• Vérifiez régulièrement l'état général de l'appareil/du cordon d'alimentation/des accessoires. Si l'appareil est endommagé ou ne fonctionne plus, cesser toute utilisation.

• Ne pas porter de l'appareil.